




DO'S AND DON'TS

FOR INSTALLING 2-TYPE FIRE RETARDANT CLOSURES


2-TYPE FIRE RETARDANT CLOSURES (GREY IN COLOR) MUST BE HANDLED AND INSTALLED CAREFULLY. THEY ARE DIFFERENT FROM THE STANDARD BLACK 2-TYPE.

DO . . . ALIGN ARROWS ON SOLID OR SPLIT GROMMETS TO MATCH SPLIT IN COVER.

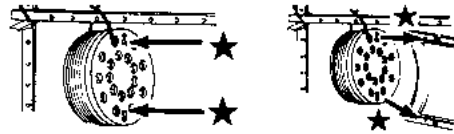


GROMMET


DO . . . INSTALL ALL CABLES FROM REAR LOWER HOLE, WORKING FORWARD.

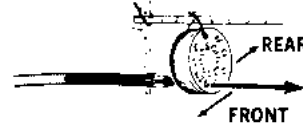


DO . . . USE SEALANT* TO LUBRICATE AROUND ALL CABLE SHEATH BEFORE INSTALLING.

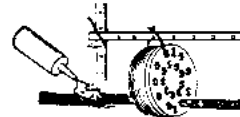

DO . . . CLEAN TIP* CABLES AFTER INSTALLING. PULL TIP CABLE BACK TO TAPED COLLAR.

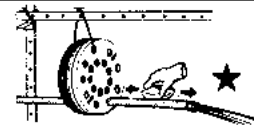


DO . . . FOR NEW CONSTRUCTION ATTACH BONDING HARNESS TO EACH TIP CABLE.

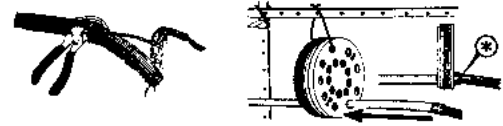


ENDPLATE


DO . . . BE SURE TO ROUND CABLE THEN MEASURE. CUT WASHER TO SIZE. IF WASHER ENDS **DO NOT TOUCH**. THEN CUT WASHER TO NEXT LARGER SIZE.

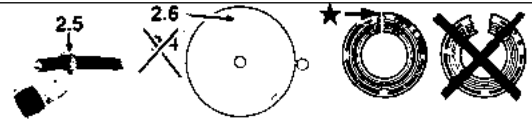


DO . . . TAPER-CUT RTW GASKET MATERIAL AT START AND FINISH.

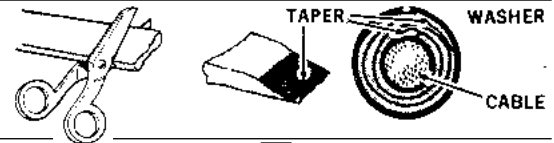

DO . . . WRAP RTW GASKET MATERIAL **EVEN** WITH WASHERS.

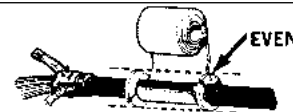

DO . . . ★ CLEAN* ENDPLATE SECTIONS. CUT RTE GASKET MATERIAL AT AN ANGLE. **DO NOT STRETCH.**

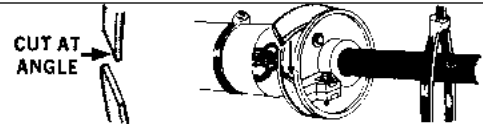


COVER


DO . . . ★ CLEAN* COVER HALVES, THEN RUN A BEAD OF SEALANT* INTO AND OVER GROOVES AT GROMMET END ONLY.




DO . . . PUT GROMMET END IN **FIRST** AND ALIGN ARROWS TO COVER. PLACE BACK COVER CLIP THEN TIGHTEN.

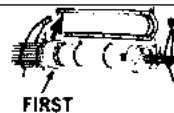

INSTALL RC GASKET MATERIAL ON COVER THEN REMOVE BACKING PAPER.

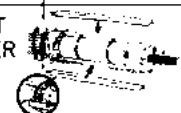

DO . . . "HAND START" ALL BOLTS, THEN TORQUE TO **250 in-lbs** (2.9 kgm) START AT GROMMET END.

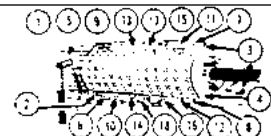


*Carefully follow health, safety and environmental information given on Material Safety Data Sheets for Sealant and Sealing Surface Cleaners.




GROMMET

DON'T . . . MIS-ALIGN GROMMET ARROWS WITH COVER HALVES

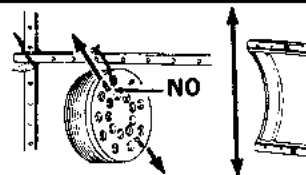


ENDPLATE

DON'T . . . USE WASHERS THAT ARE CUT TOO SMALL.

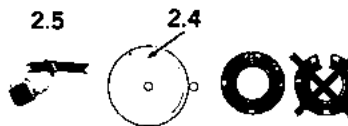

DON'T . . . OVER-WRAP COLLAR BUILD-UP OF RTW GASKET MATERIAL

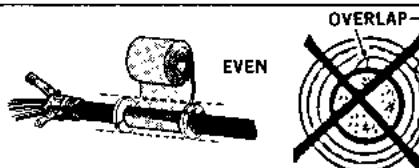


DON'T . . . OVERLAP RTE GASKET MATERIAL. "DO NOT STRETCH".



COVER

DON'T . . . POSITION ENDPLATE SIDE INTO BACK COVER GROOVES FIRST.

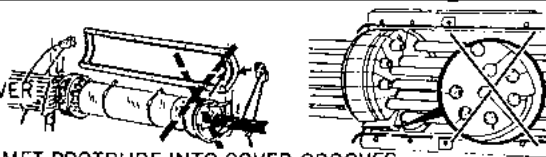


LET SPLITS IN GROMMET PROTRUDE INTO COVER GROOVES.


DON'T . . . STRETCH RC GASKET MATERIAL BEFORE INSTALLING.




DON'T . . . USE PNEUMATIC WRENCH TO START BOLTS. START AT ENDPLATE END.

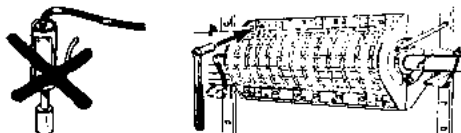

DON'T . . . OVER-TORQUE BOLTS BEYOND 250 in-lbs (2.9 kgm)

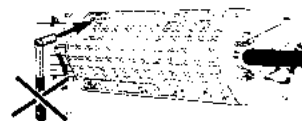

DON'T . . . MIX STANDARD BLACK 2-TYPE CLOSURE PARTS WITH GRAY FIRE RETARDANT CLOSURE PARTS

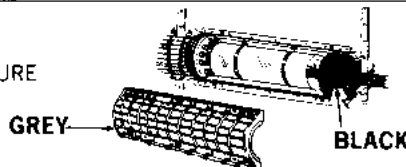

IMPORTANT NOTICE

Before using this product, you must evaluate it and determine if it is suitable for your intended application. You assume all risks and liability associated with such use.

Warranty; Limited Remedy; Limited Liability. This product will be free from defects in material and manufacture as of the date of purchase. **3M MAKES NO OTHER WARRANTIES INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** If this product is defective within the warranty period stated above, your exclusive remedy shall be, at 3M's option, to replace or repair the 3M product or refund the purchase price of the 3M product. **Except where prohibited by law, 3M will not be liable for any loss or damage arising from this 3M product, whether direct, indirect, special, incidental or consequential regardless of the legal theory asserted.**

